


Unlocking Procedures for 2008 units

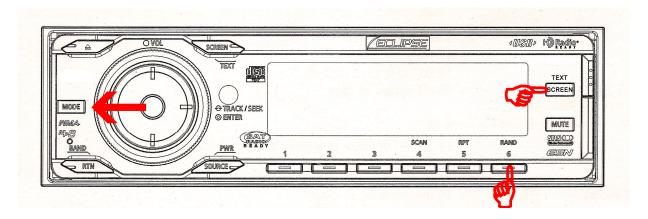

**Before trying to Retrieve the Existing Security Code make sure the unit is displaying "CALL 800", if it is displaying "DISC" the unit needs to be locked-up by inserting any CD 5 or more times.

 Retrieving the 6 digit <u>SECURITY CODE</u>: Press and hold PRESET #6 first, then the SCREENTEXT button together for 10 seconds then the SECURITY CODE will appear. (Give this code to the Service Representative)

(Note this is a 10 seconds procedure):

- Before entering the new UNLOCK code, make sure the 6 digit SECURITY CODE is still on the display of the radio. If not press and hold PRESET #6 first, then the SCREENTEXT button together for 10 seconds to bring the SECURITY CODE back up.
- 3. Before entering UNLOCK CODE (see diagram) first press the **SCREENTEXT** button once, then push the **MODE** button once. The display will show 6 dashes. Press PRESET #1 over and over until you see the first digit of the new code, PRESET #2 for the second digit, and PRESET #3 for the third digit, PRESET #4 for fourth digit, PRESET #5 for fifth digit, and PRESET #6 for the sixth digit.
- After confirming the UNLOCK CODE on the display, press and hold the SCREENTEXT button for 2 seconds. Display should read "OK" (If the display reads "ERR", you MUST re-enter the UNLOCK CODE again).

Customer Support 1-800-557-8278 Ext:334 M-F 8:30 AM - 5:00 PM (EST)