


Unlocking procedure for 1999-2000 current products

All 55xxx, 54xxx, 5605, 56050, 4502, 4441 & 4440 series unit

Before trying to Retrieve the Existing Code make sure the unit is displaying "CALL 800", if it is displaying "DISC" the unit needs to be locked-up by inserting any CD.

I) How to Retrieve the Existing Code:

- 1) Press and hold PRESET #6 first, then press and hold the AM/FM button, hold both button together for 10 seconds.
- 2) The display will read "SEC" then the 6 digit SECURITY CODE will appear.
- 3) Verify the 6 digit SECURITY CODE (If the unit is a 5440 or 54400, please see [Fig. A](#)).
- 4) Call Technical Department at (800) 421-1996 to obtain the new UNLOCK code.

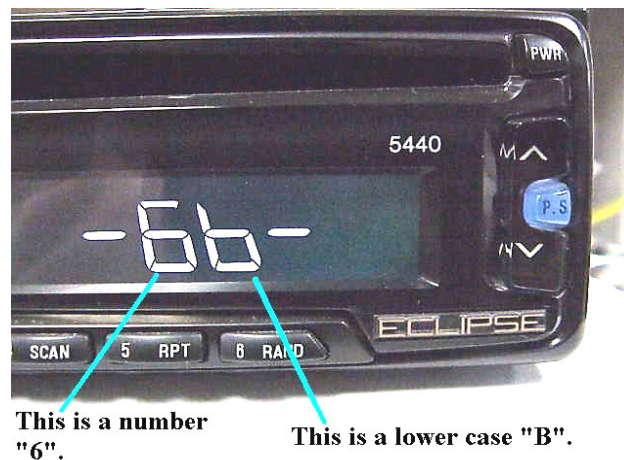

(Fig. A)

II) The UNLOCKING procedure:

- 1) Before entering the new UNLOCK code, make sure the 6 digit SECURITY CODE is still on the display of the radio. If not press and hold PRESET #6 first, then the AM/FM button together for 10 seconds to bring the SECURITY CODE back up.
- 2) (**Note this is a 10 seconds procedure**) Enter UNLOCKED CODE by pressing TUNE UP button (^) on the right side of the unit once, display will show 6 dashes. Press preset #1 over and over until you see the first digit of the new code, PRESET #2 for the second digit, and PRESET #3 for the third digit. Press TUNE DOWN button (v) on the right side of the unit once to enter the last three digits of the code (DISPLAY WILL NOT CHANGE). Use PRESET #1 for fourth digit, PRESET #2 for fifth digit, and PRESET #3 for the sixth digit.
- 3) After confirming the UNLOCK CODE on the display, press and hold the AM/FM button for 2 seconds. Display should read "OK" or give you 3 dashes (If the display reads "ERR", you MUST re-enter the UNLOCK CODE again).