

Unlocking procedure for 2001-2002

All CD-xxxx series unit

Before trying to Retrieve the Existing Code make sure the unit is displaying "CALL 800", if it is displaying "DISC" the unit needs to be locked-up by inserting any CD.

I) How to Retrieve the Existing Code:

- 1) Press and hold PRESET #6 first, then press and hold the FUNC button, hold both buttons together for 10 seconds.
- 2) The display will read "SEC" then the 6 digit SECURITY CODE will appear.
- 3) Verify the 6 digit SECURITY CODE.
- 4) Call Technical Department at (800) 421-1996 to obtain the new UNLOCK code.

II) The UNLOCKING procedure:

- 1) Before entering the new UNLOCK code, make sure the 6 digit SECURITY CODE is still on the display of the radio. If not press and hold PRESET #6 first, then the FUNC button together for 10 seconds to bring the SECURITY CODE back up.
- 2) (**Note this is a 10 seconds procedure**) Enter UNLOCKED CODE by pushing up on the TUNE UP knob (^) on the left side of the unit once (See **Fig. A**), display will show 6 dashes. Press preset #1 over and over until you see the first digit of the new code, PRESET #2 for the second digit, and PRESET #3 for the third digit. Push down on the TUNE DOWN knob (v) on the left side of the unit once to enter the last three digits of the code (DISPLAY WILL NOT CHANGE). Use PRESET #1 for fourth digit, PRESET #2 for fifth digit, and PRESET #3 for the sixth digit.
- 3) After confirming the UNLOCK CODE on the display, press and hold the FUNC button for 2 seconds. Display should read "OK" (If the display reads "ERR", you MUST re-enter the UNLOCK CODE again).

This is the UP
& Down knob.

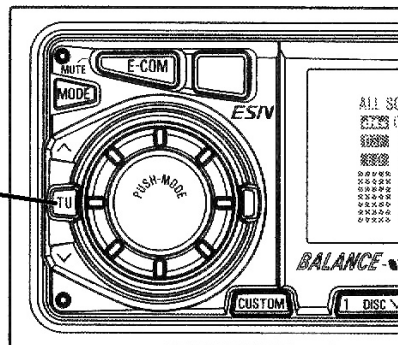


Fig. A