

Rolling code on 2003 and UP units only

- 1) Before entering the new UNLOCK code, make sure the 6 digit SECURITY CODE is still on the display of the radio. If not press and hold PRESET #6 first, then the **FUNC** button together for 10 seconds to bring the SECURITY CODE back up.
- 2) (**Note this is a 10 seconds procedure**) Enter UNLOCKED CODE by pushing the **FUNC** button once, then push the **DISC** button once. The display will show 6 dashes. Press preset #1 over and over until you see the first digit of the new code, PRESET #2 for the second digit, and PRESET #3 for the third digit, PRESET #4 for fourth digit, PRESET #5 for fifth digit, and PRESET #6 for the sixth digit.
- 3) After confirming the UNLOCK CODE on the display, press and hold the **FUNC** button for 2 seconds. Display should read "**OK**" (If the display reads "**ERR**", you **MUST** re-enter the UNLOCK CODE again).